



Disassembling HP Deskjet F4480 Top Lid

Removing the top cover of the printer is a prerequisite for most installations

Written By: Tim



INTRODUCTION

In order to gain access to most of the internal components the top (or lid) of the printer must be removed. This guide is intended as a prerequisite for other installations.



TOOLS:

- [T10 Torx Screwdriver](#) (1)
-

Step 1 — Open front access panel



- Open the front access panel by placing your finger in the front slot and pulling gently.

Step 2 — Removing Top Lid




- Open the protective lid that is covering the glass. Press gently against the base of the panel to remove the lid from the rest of the printer.

Step 3




- Remove the **four** 9mm T10 Torx screws on the top.

Step 4

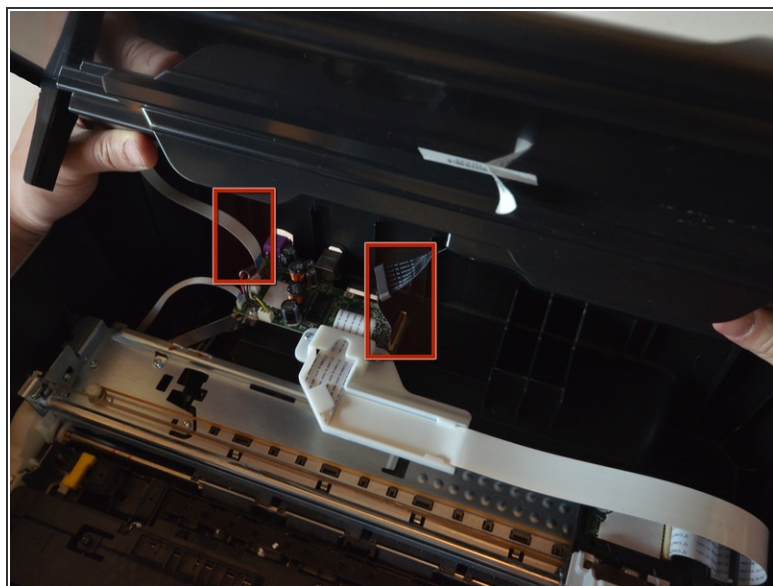

- Carefully lift the top panel off of the printer.
- Do not tear or damage the **two** cables that connect the top lid to the motherboard.

 Step 5

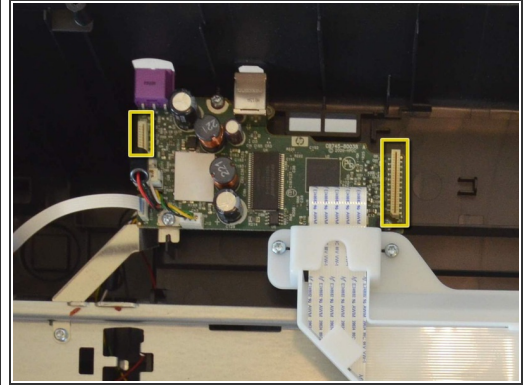

- Remove the **two** cables by gripping each one close to their connection ports on the motherboard and gently disconnecting them.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 10:47:50 PM.